


MAHLE CAD-6KUEA

EN

Operation Manual
Universal Engine Adapter

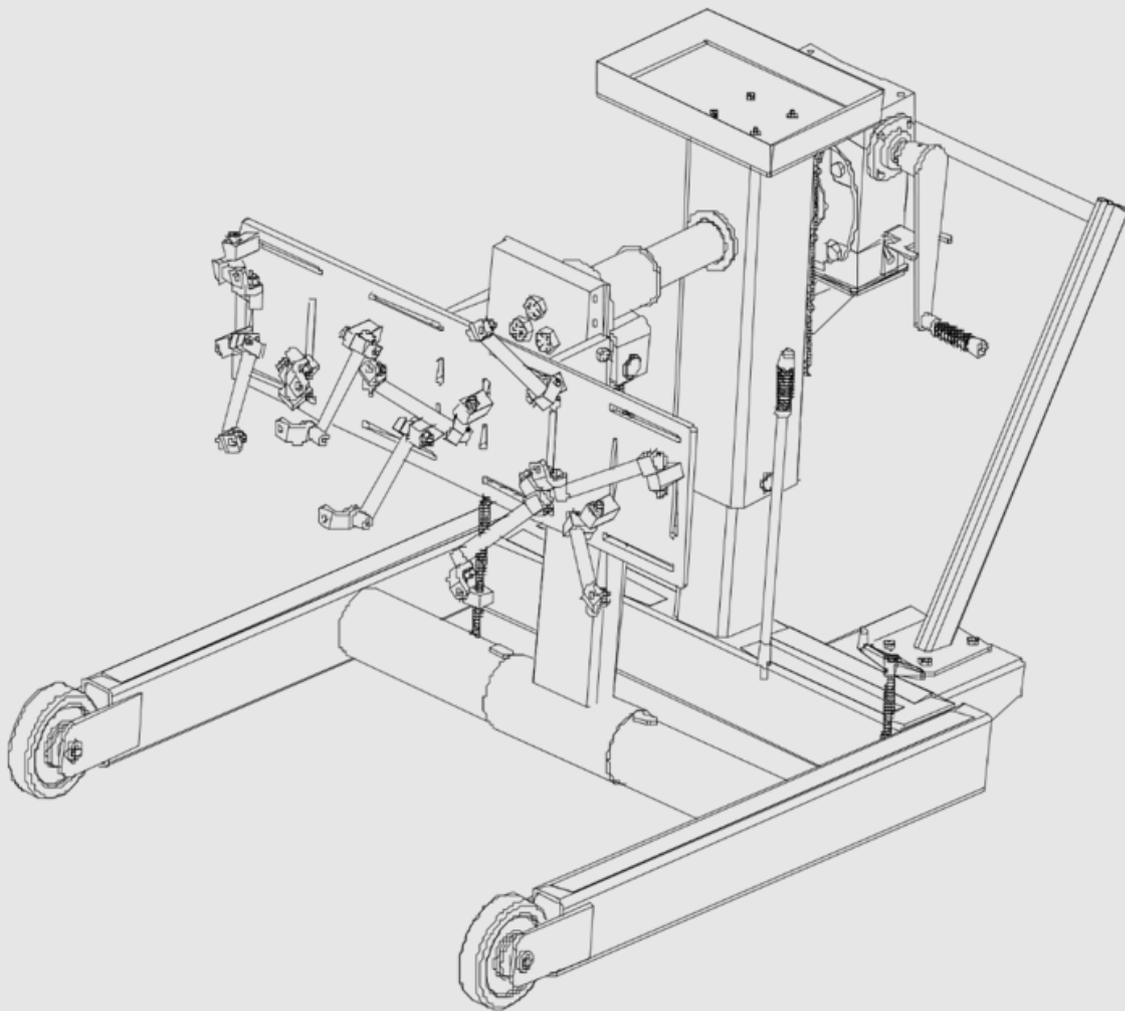



**EVERY PERSON WHO OPERATES THIS
EQUIPMENT NEEDS TO KNOW AND
UNDERSTAND ALL OF THE INFORMATION IN
THIS MANUAL – FAILURE TO DO SO COULD
RESULT IN SERIOUS INJURY OR DEATH.**

**READ THIS MANUAL
CAREFULLY AND
RETAIN FOR YOUR
RECORDS**

Contents

1. Safety Regulations	4
1.1 Warnings.....	4
2. Foreword	5
2.1 From the manufacturer.....	5
3. Symbols Use	5
3.1 Signal words.....	5
4. Responsibilities	6
4.1 Receiving inspection	6
4.1 Owner and/or operator responsibilities.....	6
5. Specifications	6
6. Operation	7
6.1 Attaching Universal Engine Adapter.....	7
7. Load Rating Chart	7
8. Notes	8

1. Safety Regulations

1.1 Warnings

- ⚠ Failure to follow all these safety instructions can lead to severe injury or death from a sudden loss of the load. Contact the manufacturer using the contact information provided if you have any questions.
- ⚠ Maximum capacity is 6,000 lbs. Do not exceed. Overloading can result in equipment failure.
- ⚠ Never use parts, attachments, or accessories that have not been provided by the manufacturer. Do not use hardware with a lower grade than what is provided by the manufacturer.
- ⚠ No alterations shall be made to this product.
- ⚠ Never load engine stand abruptly. Load engine stand slowly and carefully.
- ⚠ Never allow the engine's center of gravity to be misaligned with the engine stand's axis of rotation. Ensure engine is fully secured to Engine Adapter Plate before placing on stand.
- ⚠ Always apply the locking screws when stand is being loaded and/or remaining stationary.
- ⚠ Always use engine stand on a hard level surface. Be sure surface is clean and free of debris, cracks, and chips. Avoid any uneven or dirty surfaces when moving loaded engine stand.
- ⚠ Never mount an engine that makes the stand unstable.

tech.mss@us.mahle.com with any comments or questions.

2. Foreword

2.1 From the manufacturer

Thank you for your purchase. To complement the offering of A/C, fluid and nitrogen service equipment, MAHLE Service Solutions has partnered with Gray Manufacturing to provide the highest quality hydraulic and pneumatic equipment available for the professional service technician. This equipment adheres to high standards promised in the MAHLE guarantee including the assurance of innovation and reliability that comes with the Gray Manufacturing name. Please contact MAHLE Service Solutions' customer service at (800) 468-2321 or tech.mss@us.mahle.com with any comments or questions.

3. Symbols Use

3.1 Signal words

Signal words call attention to a safety message or messages, or a property damage message or messages, and designate a degree or level of hazard seriousness. Signal words used in this manual include:

Keyword	Probability of occurrence	Severity of danger if instructions not observed
DANGER	Immediate impending danger	Death or severe injury.
WARNING	Possible impending danger	Death or severe injury
CAUTION	Possible dangerous situation	Minor injury
NOTICE	Possible damage to property	Possible property damage

4. Responsibilities

4.1 Receiving inspection

Before attempting to operate this equipment, thoroughly read and understand this manual. Completely remove all tape and packaging. Inspect the equipment immediately upon delivery. If shipping damage is evident, inform the delivering carrier immediately and contact the manufacturer using the contact information on the back cover of this manual.

4.1 Owner and/or operator responsibilities

The owner of this equipment must read these instructions and maintain them for future reference and for instructing any other users of the equipment. The owner is responsible for keeping all warning labels and instruction manuals legible and intact. Replacement labels and literature are available from the manufacturer. The owner must never authorize or allow anyone to use this equipment until the operator has read and understood the information in this manual and on the accompanying labeling on the equipment itself.

If this equipment is being used in an occupational setting (or workplace), the employer should ensure that all personnel working with and around the equipment know of the risks associated with its use. Personnel involved in the use and operation of this equipment shall be careful, competent, trained, and qualified in the safe operation of the equipment and its proper use when servicing motor vehicles and their components. Safety information provided with this equipment should be emphasized by the employer and understood by each employee. The employer must make this manual available to all personnel using this equipment and all personnel must read and understand the contents of this manual. If the operator is not fluent in English, the manufacturer's instructions and warnings shall be read to and discussed with the operator in the operator's native language by the employer, making sure that the operator comprehends its contents and observes the proper procedures for use of this equipment.

5. Specifications



Model GAD-6KUEA	US units	Metric units
Capacity	6000 lb.	2722 kg
Weight	125 lb.	56 kg
Overall width	7.5 in	19 cm
Overall length	44 in	112 cm
Overall height	12.5 in	32 cm

6. Operation

6.1 Attaching Universal Engine Adapter

1. Secure Universal Engine Adapter to the Adapter Extension Plates on the engine stand with the 5/8-
2. 11UNC X 2" bolts (4) and 5/8" nuts (4). Torque bolts to 120 ft-lbs.
3. Attach minimum number of Mounting Arm Retention Blocks, Mounting Arm Sliding Rods, and Mounting Arm Brackets that coincide with the engine weight. See Load Rating Chart.
4. Using a shop crane or other suitable means, move the engine into position for attaching to the Universal Engine Adapter.
5. Align the engine's center of gravity within 2" of the engine stand's axis of rotation by raising or lowering the engine. If the Universal Engine Adapter and Adapter Extension Plates need to move up or down, do so at this time.
6. Attach the minimum number of slide arm assemblies to the engine. Place the arms in the most advantageous areas on the engine. These are typically a combination of lower and higher mounting areas. Tighten all Grade 8 Flange bolts to 75 ft-lbs.
7. Slowly transfer the engine's weight to the engine stand.

⚠ CAUTION! If the engine or stand shifts, moves, or rotates check that the engine's center of gravity is in line with the engine stand's axis of rotation and that all hardware is properly tightened. If something seems wrong, remove the engine stand from service and inspect it according to the Inspection Instructions in the engine stand Owner's Manual.
8. To remove engine from Universal Engine Adapter, complete the above steps in reverse order. If more instruction is needed please consult Engine stand owner's manual.

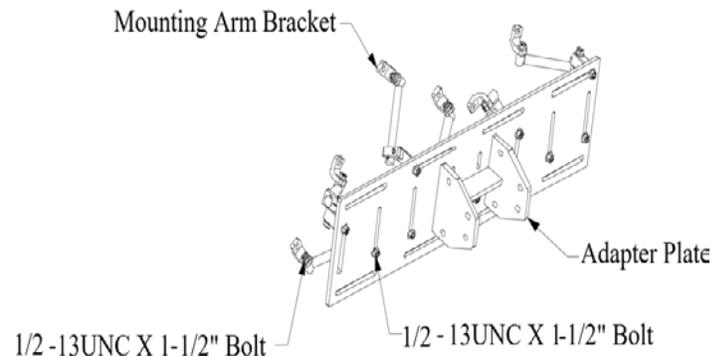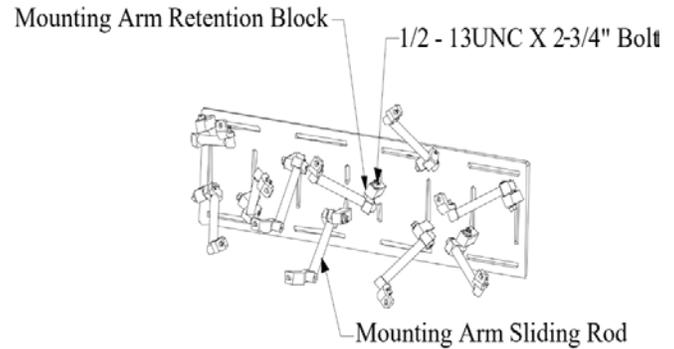

7. Load Rating Chart

Load Rating Chart

Engine Weight	Minimum Slide Arms
2,000lbs and under	5
2,001lbs to 4,000lbs	9
4,001lbs to 6,000lbs	13
Grade 8 Bolt Torque	75 ft-lbs

670-10693

8. Notes

MAHLE

MAHLE Aftermarket Inc.
916A West State Street,
St. Johns, MI 48879 U.S.A.

Phone: (800) 468-2321
Fax: (717) 755-8304
E-mail: tech.mss@us.mahle.com

www.servicesolutions.mahle.com