


Assembly Instructions

PSX & DFX

NO TOOLS REQUIRED

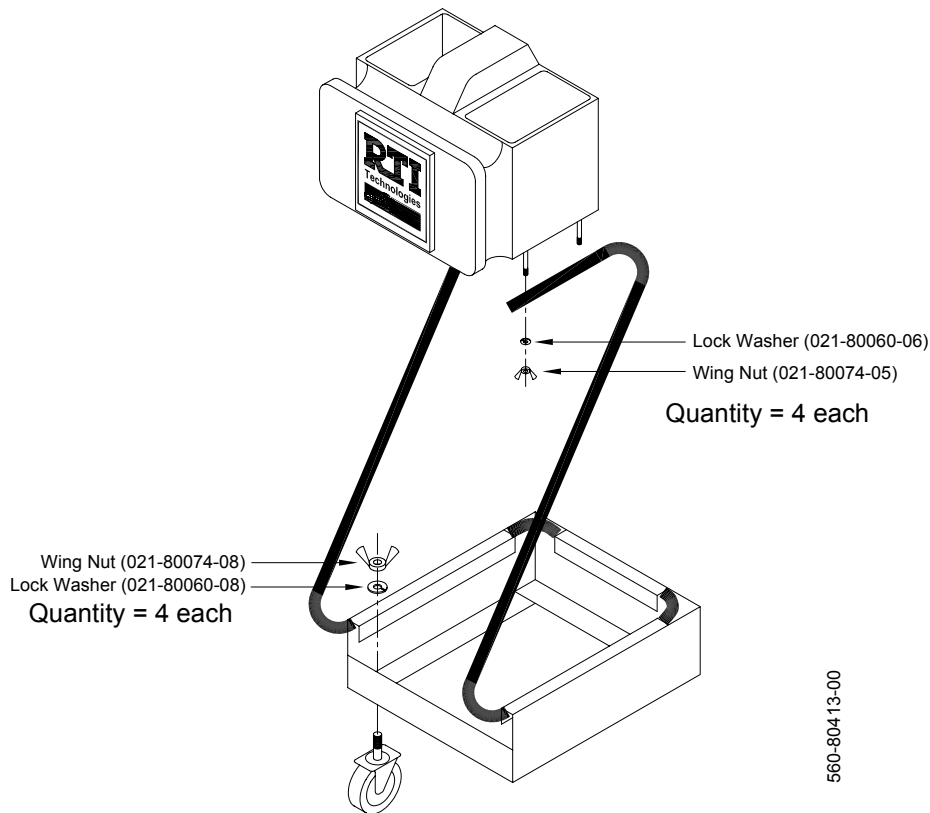

- 1) Unpack all parts and verify that all items shown were received.
- 2) Turn cart on side and install the four casters - using wing nuts and lock washers.
- 3) Turn cart upright so it's resting on the casters.
- 4) Install the plastic cabinet on the cart - inserting the four studs on the cabinet into the mating holes of the tubes.
- 5) Secure the plastic cabinet using four wing nuts and lock washers.



RTI Technologies, Inc.
10 Innovation Drive
York, PA 17402
Phone: 717-840-0678
E-mail: tech@rtitech.com
Web: www.rtitech.com

560-80412-00