


# MAHLE


## TechPRO® 2 Plus Quick Start Guide



## 1. Select Language

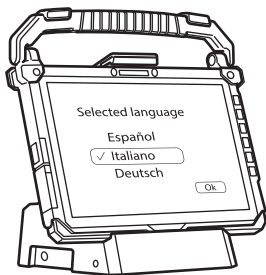

## 2. Select country of use

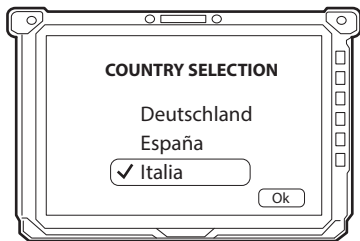

## 3. Select keyboard layout




## 4. Connect the device to the Wi-Fi network, entering the password




If there is a Connex Link network, select **“I do not have an Internet connection”** and proceed with system initialisation. After the initialisation procedure, the instrument will automatically connect to the Connex Link network.


#### 5. Accepting the Windows licence agreement

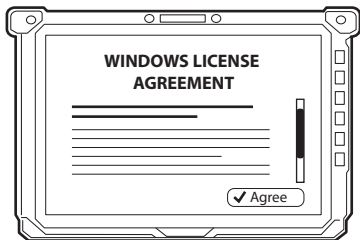


#### 6. Follow the automatic PC preparation/configuration procedure

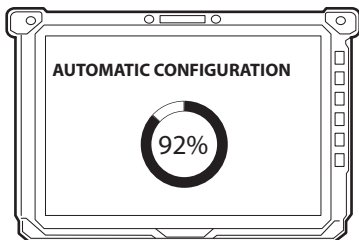

#### 7. Select brand and enter password. Customised apps will be installed. Reboot the system

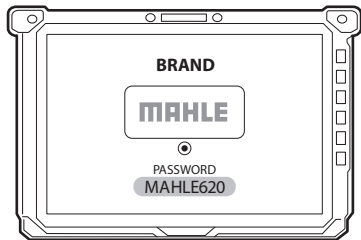

8. Select User Account, then enter User Password

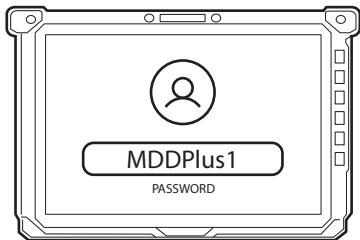

9. The welcome screen is displayed



If necessary, the **Administrator password** can be obtained by sending a request to:  
**[plus.assistance@mahle.com](mailto:plus.assistance@mahle.com)**



Please refer to the TechPRO 2 Plus manual for the actual use of the device.


## SOFTWARE CONFIGURATION

Wait for the TechPRO® 2 DS application to start.


1. Connect VCI to vehicle or to tablet/pc. Select language




2. Select country of installation

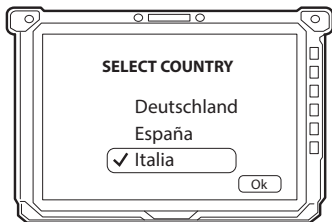


3. Check for updates

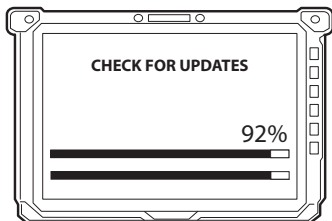

#### 4. Start scan of BLE devices

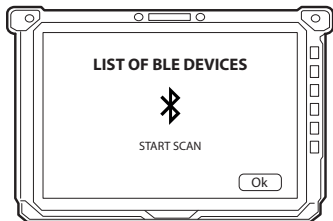

#### 5. Check product activation licences

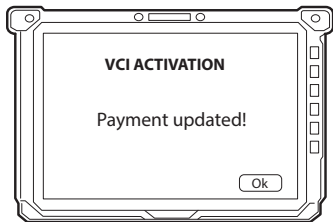

#### 6. The device is now ready to be used on a vehicle.



Please refer to the TechPRO® manual for the actual use of the device.



In case of multiple devices, check the MAC address on the VCI nameplate.

This card is a “Quick Guide”  
and is not intended to replace  
an instruction manual.

For further information or more  
detailed instructions, please  
refer to the user manual using  
the QR Code shown.



[www.servicesolutions.mahle.com](http://www.servicesolutions.mahle.com)

[www.mpulse.mahle.com](http://www.mpulse.mahle.com)

This Quick Guide is available  
in additional languages: scan  
QR Code to download

