

PSX-2

OPERATION INSTRUCTIONS



CAUTION

The PSX-2 is designed to exchange power steering fluid and approved power steering flush chemicals.

Using the PSX-2 for brake fluid and other liquids may damage the pump seals and void the warranty

EXCHANGE


1. Verify that there is enough fluid in the New Fluid Tank and sufficient space in the Used Fluid Tank for the exchange procedure. The vehicle engine must be off.
2. Remove the Power Steering Fluid Reservoir Cover and submerge Service Hose into the reservoir.
3. Remove the used fluid from the Reservoir by pressing the rear of the switch on the control wand.
4. Refill the Reservoir by pressing the front of the switch on the control wand.

Suggestion: Fill new fluid level slightly above steering rack return line.

5. Start the vehicle and turn the steering wheel all the way clockwise and then all the way counter-clockwise (lock to lock).
6. Turn the vehicle engine off.
7. Repeat steps 3 through 6 until the desired level of fluid exchange is achieved.

Caution: Do not allow Used Tank to overflow

REPLACEMENT PARTS	
Pump	320-80016-00
New Fluid Tank	315-80004-00
Used Fluid Tank	315-80005-00
Hose Cap	028-80250-18
Switch	024-80088-00

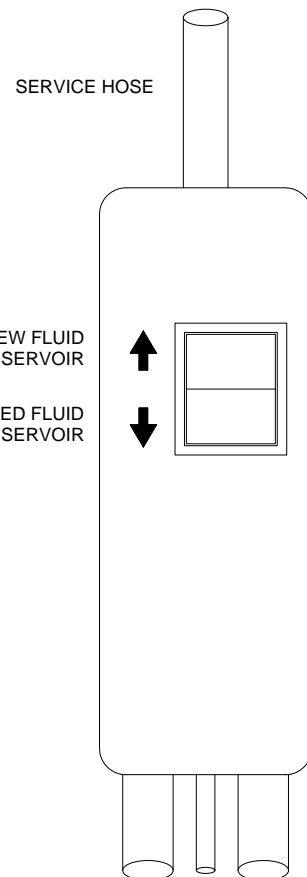

Technical Support: 800-468-2321

035-80988-00

RTI Technologies, Inc. - 4075 East Market Street - York - PA 17402 - USA

EC Declaration of Conformity for Machinery

Directive 98/37/EC



RTI Technologies, Inc.
4075 East Market Street
York, Pennsylvania 17402 USA
Phone: 717-840-0678

Herewith declares that:

- PSX-2 Power Steering Fluid Exchanger
- is in conformity with the provisions of the Machinery Directive (directive 98/37/EC) and with the national implementing legislation
- is in conformity with the provisions of the following other EC directives:

Electromagnetic Compatibility (EMC) Directive 89/336/EEC

Electromagnetic Emissions EN 61000-6-4: 2001

Electromagnetic Immunity EN 61000-6-2: 1999

The PSX-2 is certified to the EMC Directive like the ATX-2 tested by:

TÜV America Inc.
1775 Old Highway 8 NW Ste. #104
New Brighton, MN 55112
Phone: 651-638-0262

Thomas L. Crandall

A handwritten signature in black ink that reads 'Thomas L. Crandall'.

Vice President - Technology

Dated: January 10, 2005

