

OPERATION
&
MAINTENANCE
MANUAL

AC880

Refrigerant Handling System



Manual P/N 035-80837-00

TABLE OF CONTENTS

AC880

Before Using the AC880	2
Safety Precautions	2
Using the AC880	3
Setup	4
Fill Charge Cylinder	5
Recover/Recycle	6
Drain Recovered Oil	7
Deep Vacuum	8
Charge	9
Automatic	10
Access Stored Data	12
Set Over Charge Amount	13
Scheduled Maintenance	14
Filter Maintenance	14
Parts Identification	15
Troubleshooting Fill Cylinder Procedure	18

CONGRATULATIONS

You have purchased one of the finest Recovery, Recycling, and Charging Machines available!

Your AC880 was proudly manufactured for MATCO Tools by RTI Technologies Inc., York, PA.

Fill out and return the Warranty Card within 90 days to activate the warranty and free lifetime technical support.

TECHNICAL SUPPORT

800-468-2321 (Ext. 259)

tech@rtitech.com

BEFORE USING THE AC880

Check for any shipping damage. Place a claim with carrier if damage is discovered. **DO NOT USE A DAMAGED UNIT.**

Complete and return the Warranty Card to activate technical support service and warranty coverage.

These general instructions describe normal operation and maintenance situations encountered with the AC880. Failure to read and comply with these instructions or any one of the limitations noted herein can result in serious injury and/or property damage.

A few minutes spent reading these instructions can make an operator aware of dangerous practices to avoid and precautions to take for his own safety and the safety of others. The instructions should not be interpreted to anticipate every possible contingency.

The AC880 should not be operated or serviced by any person who has not read all the contents of this manual.

It is the responsibility of the owner/user to operate the AC880 in accordance with all specifications and laws which apply.

A regular schedule of inspection of the AC880 should be established and records maintained with special attention given to Hoses, Compressor Oil Level, Vacuum Pump Oil Level, and Filters.

SAFETY PRECAUTIONS

Recover, Recycle, and Charge only the refrigerant for which the machine is configured.

Wear safety glasses and protective gloves. Refrigerant has a very low boiling point and can cause frostbite.

Follow the AC880 operating procedures sequentially to avoid prematurely disconnecting hoses or opening valves which may release refrigerant to the atmosphere.

Do not expose the AC880 to moisture or operate in wet areas.

Use the AC880 in locations with mechanical ventilation that provides at least four air changes per hour.

Hoses used with the AC880 must have shutoff devices within 12 inches (30 centimeters) of the connection point to the A/C System to minimize the introduction of Non-Condensable Gas (Air) into the AC880 and the release of refrigerant when being disconnected.

Disconnect power before performing any maintenance or service on the AC880.

Connect the AC880 to a properly grounded receptacle. Do not overload the circuit.

Avoid using an extension cord with the AC880. If necessary use a good condition three wire, grounded, #14 AWG or larger extension cord of the shortest possible length.

Do not connect the AC880 to the liquid side of any A/C System with a capacity greater than 4 lbs (1.8 Kg). Refrigerant in A/C Systems having larger capacities must be recovered from the vapor side only.

Never connect the Red or Blue Hose on the rear of the AC880 to the Liquid Port of a Cylinder of Refrigerant to fill the Charge Cylinder. Doing so may cause the Compressor to fail and void the warranty.

Avoid breathing refrigerant or lubricant vapor or mist. Exposure may irritate eyes, nose and throat. If accidental system discharge occurs, ventilate work area before continuing.

Additional health and safety information may be obtained from refrigerant and lubricant manufacturers.

Special Considerations with R134a

R134a has been shown to be nonflammable at ambient temperature and atmospheric pressure. However, tests under controlled conditions have indicated that at pressures above atmospheric and with air concentrations greater than 60 percent by volume, R134a can form combustible mixtures.

While it is recognized that an ignition source is also required for combustion to occur, the presence of combustible mixtures is a potentially dangerous situation and should be avoided.

Under no circumstances should any equipment be pressure tested or leak tested with Air and R134a mixtures. Do not use compressed air (shop air) for leak detection in R134a systems.

USING THE AC880

Note: The purpose of this discussion is to familiarize the user with the features and functions of the AC880 Refrigerant Handling Station. The procedures discussed in this manual assume that the AC880 has been set up in accordance with the figures which are referred to and that the AC880 has been connected to the proper power supply. This manual does not illustrate correct A/C service, but rather how to correctly use the AC880.

The AC880 is microprocessor controlled with a menu driven user interface. All of the functions of the AC880 are accessed by pressing a few simple key strokes and following the prompts. The internal Charging Cylinder is attached to a strain gauge measuring device (load cell) and the weight is electronically displayed.

The AC880 has a Fill Cylinder feature that allows refrigerant to be loaded directly into the Charging Cylinder without going through the normal Recover/Recycle mode. When selected, this feature allows the AC880 Charging Cylinder to be re-filled in just a few minutes, at which point it will automatically stop at approximately 20 lbs (9 Kg).

The AC880 Recovers and Recycles simultaneously in a true "single pass" through the filters and stores the refrigerant in the Charging Cylinder where it is immediately available for use. This process automatically stops at 24 lbs (11 Kg) or when a 15 In Hg (-0.5 Bar) vacuum is sensed. The AC880 will wait for a minimum factory default of two minutes for "out gassing" of cold refrigerant to raise the pressure back up to 3 psig (0.2 Bar) which would cause the Recover/Recycle process to start again and reset this two minute Recycle Hold Timer before displaying that the process is complete. The Recycle Hold Timer can be changed every time a Recover/Recycle procedure is run. Longer times should be selected on colder days or for A/C Systems with large liquid capacities. Increasing this value may increase total time to Recover/Recycle while decreasing the time may result in an incomplete Recovery of the A/C System. Refer to the chart below for guidelines on setting the Recycle Hold Timer. The value entered is stored in the memory of the AC880 and becomes the default value each time it is set. Non-Condensable Gases are vented automatically during Recovery/Recycle. The Amount of refrigerant recycled is displayed at the end of the procedure. This value is added to the Total Amount Recycled and stored in the memory of the AC880 (See Access Stored Data on Page 12).

Temperature	Less than 50°F (10°C)	50°F (10°C) to 80°F (26.5°C)	Greater than 80°F (26.5°C)
Recycle Hold Time	10 minutes	5 minutes	2 minutes


An integrated Deep Vacuum Pump draws on both the High and Low Hoses, ensuring complete evacuation of the A/C System. The amount of time that the Vacuum Pump has been programmed to run will count down on the display. The value entered is stored in the memory of the AC880 and becomes the default value each time it is set. The Low Pressure Gauge can be used to monitor a rise in A/C System pressure. When programmed to do so, the AC880 will pause and start a count up timer indicating how long the Vacuum Pump has been off, thus allowing the operator to determine if a vacuum leak is present based on increasing pressure over time. A rapid rise in pressure indicates the presence of a large leak that should be repaired. A slow rise in pressure may simply indicate that a longer Recycle Hold Time or Vacuum Time value should have been entered. A relatively constant vacuum reading over a long period of time (less than 2 InHg rise over ten minutes) is the most accurate way to check for vacuum leaks. The AC880 can also be programmed to pause to allow oil to be added to the A/C System after vacuuming and prior to charging.

Charging is done from the internal Charging Cylinder. The A/C Capacity is entered using the Keypad. The value entered is stored in the memory of the AC880 and becomes the default value each time it is set. The AC880 can dispense liquid refrigerant through either the High or Low Side Hose by changing the position of a selector switch. As refrigerant leaves the AC880, the display will show an increasing weight to the programmed charge amount plus a factory set one ounce (0.03 Kg) Over Charge Amount necessary for compensation of refrigerant loss in the hoses. This Over Charge Amount can be changed to accommodate different operating conditions (see Set Over Charge Amount on Page 13.) An integrated heater automatically engages whenever Charging occurs. The amount of refrigerant charged is added to the total amount charged and stored in the memory of the AC880 (see Access Stored Data on Page 12).

The AC880 can be programmed to perform the Recover/Recycle, Deep Vacuum and Charge in a completely Automatic mode. The AC880 will always go through the Recover/Recycle procedure, but will go immediately to the Recycle Hold Timer if the A/C System is empty. The following matrix outlines the most commonly used options that can be programmed:

Recover/Recycle	X	X	X	X	X	X	X	X
Deep Vacuum			X	X	X	X	X	X
Vacuum Leak Check					X	X		X
Add Oil							X	X
Charge		X		X		X	X	X

SETUP

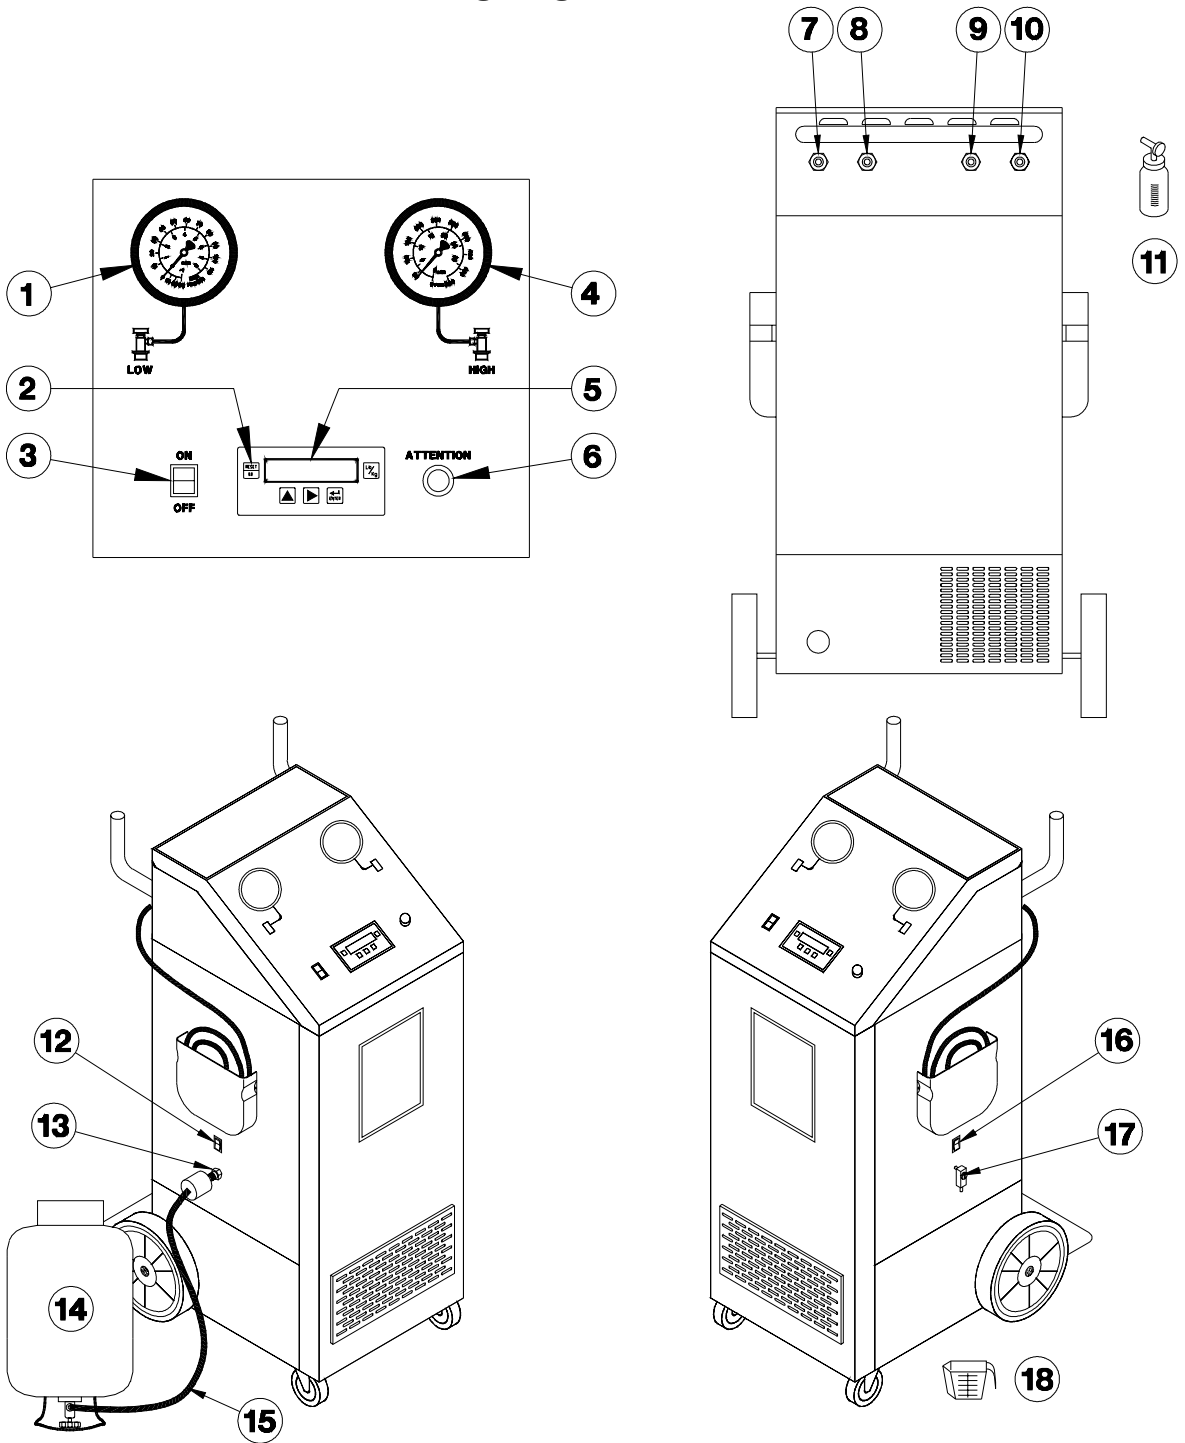

- | | | | | | |
|---|---------------------|----|--------------------------|----|-----------------------------|
| 1 | Low Pressure Gauge | 7 | Oil Charge - High Side | 13 | Fill Port |
| 2 | Keypad | 8 | Red Hose - High Side | 14 | Refrigerant Cylinder |
| 3 | Power Switch | 9 | Blue Hose - Low Side | 15 | Yellow Hose w/Anti-blowback |
| 4 | High Pressure Gauge | 10 | Oil Charge - Low Side | 16 | Oil Drain Pressure Switch |
| 5 | Display | 11 | Oil Charge Bottle | 17 | Oil Drain |
| 6 | Attention Light | 12 | High/Low Charge Selector | 18 | Oil Measuring Cup |

WEIGHT = XX.X LB
AUTOMATIC? ←

▲▲▲▲

WEIGHT = XX.X LB
FILL CYLINDER? ←

ENTER

CHECK HOSES
START? ←

ENTER

WEIGHT = XX.X LB
COMPRESSOR ON

FILL COMPLETE
FILLED = XX.X LB ←

ENTER

*

HIGH PRESSURE
SEE MANUAL

**

CYLINDER FULL
GO TO CHARGE ←

PROBLEMS ?

Refer to Page 18 should problems be encountered using the Fill Cylinder procedure.

Pressure differential between the cylinder of new refrigerant and the internal AC880 charge cylinder greatly affect the efficiency and speed of the Fill Charge Cylinder procedure.

FILL CHARGE CYLINDER

*** EXTREMELY IMPORTANT ***

Always connect Yellow Hose (15) to Cylinder (14) **first** and **then** connect other end of hose with anti-blowback valve to Fill Port (13) on AC880.

Note: For large capacity or multiple A/C Systems where recharge will NOT be done between successive recoveries, it may be desirable to skip this procedure.

1. Set up the AC880 as shown on Page 4 and then turn the Main Power Switch ON.

Note: The AC880 uses 22 lbs (10 Kg) of refrigerant when Filling the first time. If the Refrigerant Cylinder (14) is emptied, the AC880 will appear to stop filling (the Weight will stop rising) and will stay in this condition until the RESET key is pressed.

2. Using the Keypad, press the "Up Arrow" key four times to display "WEIGHT=XX.X LB" "FILL CYLINDER? ←" and press the ENTER key. The Display will read "CHECK HOSES" "START? ←".

3. Open the **LIQUID** Valve on the Refrigerant Cylinder (14) connected to the Fill Port (13) with the Yellow Hose (15).

4. Press the ENTER key when ready to start filling the AC880.

The Display will read "WEIGHT=XX.X LB" "COMPRESSOR ON". When the level is approximately 20 lbs (9 kg), 75 percent of the full capacity, the AC880 will turn OFF, the Display will read "FILL COMPLETE" "FILLED= XX.X LB ←" (the amount of refrigerant removed from the cylinder) and the Attention Light will turn ON. Close the Liquid Valve on the Refrigerant Cylinder.

Note: Press the RESET button on the Keypad to stop the Fill Cylinder procedure at any time.

5. Press the ENTER key to return to the Main Menu.

* While filling the Charging Cylinder, this screen will display periodically concurrent with the Attention Light turning ON. This is normal and nothing to be concerned about. The screen should revert to normal after a few seconds.

** This screen will display when the Charging Cylinder fills to capacity, approximately 24 lbs (11 Kg). If this occurs, the weight can be lowered using the Charge procedure on Page 9 before the AC880 can be used to recover more refrigerant. Press the ENTER key to return to the Main Menu.

Note: The AC880 Charging Cylinder can also be filled from the GAS or VAPOR side of a cylinder by following the Recover/Recycle procedure on Page 6.

Note: The AC880 will use 1.1 lb (0.5 Kg) more refrigerant than the displayed value the very first time it is used or after performing a Calibration Procedure in order to prime the internal components.

Note: The Yellow Hose (15) can be removed from the Fill Port (13) and connected to either the Blue or Red Hose connection port on the rear of the AC880 to recover the refrigerant left in the Yellow Hose (15) using the Recover/Recycle procedure on Page 6.

WEIGHT = XX.X LB
AUTOMATIC? ←

▲

WEIGHT = XX.X LB
RECYCLE? ←

ENTER

RECYCLE HOLD
TIME XX MIN ←

▲▶ ENTER

CHECK HOSES
START? ←

ENTER

WEIGHT = XX.X LB
COMPRESSOR ON

WEIGHT = XX.X LB
COMPRESSOR OFF

AMOUNT RECYCLED =
XX.X LB ←

ENTER

DRAIN RECOVERED
OIL NOW! ←

ENTER

*

HIGH PRESSURE
SEE MANUAL

**

CYLINDER FULL
GO TO CHARGE ←

RECOVER/RECYCLE

1. Set up the AC880 and turn the Main Power Switch ON.
2. Attach the Red and Blue Hoses to the A/C System per the vehicle manufacturer's instructions, open the Red and Blue Hose Valves.
3. Using the Keypad, press the "Up Arrow" key one time to display "WEIGHT= XX.X LB" "RECYCLE? ←" and press the ENTER key. The Display will read "RECYCLE HOLD" "TIME XX MIN ←".

The Recycle Hold Time is the amount of time that the AC880 waits for "out-gassing" or for the pressure in the A/C System to rise enough to automatically restart the recovery process. The minimum value is two minutes. The value entered is stored in memory and displays as the default value the next time the procedure is used.

4. Press the "Up Arrow" key to change the value of the field. Press the "Right Arrow" key to change to a different field. Press the ENTER key to accept the value. The Display will then read "CHECK HOSES" "START? ←".
5. Press the ENTER key to start recovering and recycling with the AC880.

The Display will read the "WEIGHT= XX.X LB" "COMPRESSOR ON". The AC880 will recover and recycle refrigerant from the A/C System and automatically cycle OFF when a vacuum is sensed. This vacuum level can be seen on the Low Pressure Gauge. The Display will read "WEIGHT= XX.X LB" "COMPRESSOR OFF"

A small quantity of refrigerant will probably remain in the A/C System as observed by an increasing pressure on the Low Pressure Gauge. The AC880 will automatically cycle ON to continue recovering refrigerant if pressure rises to a preset level. This automatic cycling will repeat, resetting the Recycle Hold Timer each time. When the AC880 remains OFF for the duration of the Recycle Hold Timer value entered in Step 4 the Display will read "AMOUNT RECYCLED=" "XX.X LB ←" from the A/C System and the Attention Light will turn ON.

6. Close the Red and Blue Hose Valves and disconnect the hoses from the A/C System.
7. Press the ENTER key. The Display will read "DRAIN RECOVERED OIL NOW!". Drain any recovered oil using the Drain Recovered Oil procedure on Page 7.
8. Press the ENTER key to return to the Main Menu.

* This screen will display if there is an internal fault. Turn the AC880 Main Power Switch OFF. Contact RTI Technical Support.

** This screen will display when the Charging Cylinder fills to capacity, approximately 24 lbs (11 Kg.) If this occurs, the Weight can be lowered using the Charge procedure on Page 9 before the AC880 can be used to recover more refrigerant. Press the ENTER key to return to the Main Menu.

DRAIN RECOVERED OIL

Oil is separated from the recovered refrigerant and **MUST** be removed following **EACH** Recover/Recycle procedure to determine the amount (if any) necessary to add into the A/C System as follows:

Note: The AC880 must be connected to power source. Drain Recovered Oil may be done while the AC880 Vacuum Pump is ON.

1. Press and hold the Oil Drain Re-pressurization Switch (16) for 5 seconds and then release it.
2. **Slowly** open the Oil Drain Valve (17) to drain any oil which may have been removed from the A/C System.

Unless the A/C System had previously been overfilled, the AC880 will typically not remove enough oil to make replenishment necessary.

3. Close the Oil Drain Valve (17).
4. Press and hold the Oil Drain Re-pressurization Switch (16) for 5 seconds. This permits any residual Non-Condensable Gas to be re-circulated for reprocessing during the next recycle procedure.

WEIGHT = XX.X LB
AUTOMATIC? ←

▲▲

WEIGHT = XX.X LB
VACUUM? ←

ENTER

*

A/C HAS PRESSURE
GO TO RECYCLE ←

ENTER

ENTER VACUUM
TIME XX MIN ←

▲► ENTER

PERFORM LEAK
TEST? Y/N ←

► ENTER

ADD OIL? Y/N ←

► ENTER

START? ←

ENTER

TIME LEFT = XX MIN
PUMP ON

PUMP OFF XX MIN
CONTINUE? ←

ENTER

ADD OIL NOW
CONTINUE? ←

ENTER

DEEP VACUUM

1. Set up the AC880 and turn the Main Power Switch ON.
2. Attach the Red and Blue Hoses to the A/C System per the vehicle manufacturer's instructions and open the Red and Blue Hose Valves.
3. Using the Keypad, press the "Up Arrow" key two times to display "WEIGHT=XX.X LB" "VACUUM? ←" and press the ENTER key. The Display will read "ENTER VACUUM" "TIME XX MIN ←".

* This screen will display if the AC880 senses a pressure in either the High or Low Pressure Hoses. When this occurs, the A/C System must be emptied using the Recover/Recycle procedure on Page 6. Press the ENTER key to return to the Main Menu.

4. Press the "Up Arrow" key to change the value of the field. Press the "Right Arrow" key to change to a different field. The value entered must be greater than zero. Press the ENTER key to accept the value. The Display will read "PERFORM LEAK" "TEST? Y/N←".
5. Press the "Right Arrow" key to move the cursor between Y and N to select whether or not the AC880 pauses at the end of Vacuuming so that a vacuum leak can be detected in the A/C System. Press the ENTER key to accept the Yes or No choice. The choice entered is stored in memory and comes up as the default the next time the procedure is used. The Display will read "ADD OIL? Y/N←".
6. Press the "Right Arrow" key to move the cursor between Y and N to select whether or not the AC880 pauses at the end of Vacuuming (or Vacuum Leak Checking) to allow the Adding of Oil to the A/C System. Press the ENTER key to accept the Yes or No choice. The choice entered is stored in memory and comes up as the default the next time the procedure is used. The Display will read "START? ←".
7. Press the ENTER key to start the Vacuum Pump.
The Vacuum Pump will turn On, the Display will read "TIME LEFT=XX MIN" "PUMP ON" and the minutes remaining will count down on the Display. The Vacuum Pump will turn OFF when the Display reads zero minutes.
8. If a Vacuum Leak Check was selected by choosing Y in Step 5 the Display will read "PUMP OFF XX MIN" "CONTINUE? ←" and the Attention Light will turn ON. The elapsed time since the Vacuum Pump turned OFF will count up on the Display. An increasing pressure on the Low Pressure Gauge is evidence of a vacuum leak in the A/C System. Press the ENTER key to return to the Main Menu or to Add Oil if selected in Step 6.
9. If Add Oil was selected by choosing Y in Step 6 the Display will read "ADD OIL NOW" "CONTINUE? ←", and the Attention Light will turn ON. Refer to Figure 4 and connect Oil Charge Bottle (11) to Oil Charge High Side (7) or Oil Charge Low Side (10) based on the vehicle manufacturer's instructions for charging high or low side. Open the valve on the Oil Charge Bottle (11), and leaving it open until the correct amount of oil has left the Oil Charge Bottle. Close the valve on the Oil Charge Bottle and press the ENTER key to return to the Main Menu.

WEIGHT = XX.X LB
AUTOMATIC? ←

▲▲▲

WEIGHT = XX.X LB
CHARGE? ←

ENTER

ENTER CHARGE
AMOUNT = XX.X LB ←

▲▶ ENTER

*

LOW LEVEL, GO TO
FILL CYLINDER ←

ENTER

CHECK HIGH-LOW
CHARGE SWITCH ←

ENTER

WEIGHT = XX.X LB
CHARGING

CHARGE COMPLETE
EVAC HOSES ←

ENTER

CHARGE

1. Set up the AC880 and turn the Main Power Switch ON.
2. Attach the Red and Blue Hoses to the A/C System per the vehicle manufacturer's instructions and open the Red and Blue Hose Valves.
3. Determine the refrigerant capacity of the A/C System to be charged.

Note: 1 oz = 0.02835 Kg 1 Lb = 0.45359 Kg

4. Using the Keypad, press the "Up Arrow" key three times to display "WEIGHT= XX.X LB" "CHARGE? ←" and press the ENTER key. The Display will read "ENTER CHARGE" "AMOUNT= XX.X LB ←".
5. Press the "Up Arrow" key to change the value of the field. Press the "Right Arrow" key to change to a different field. The value entered must be greater than zero. Press the ENTER key to accept the value. The Display will read "CHECK HIGH-LOW" "CHARGE SWITCH ←".

* This screen will display if the AC880 Charge Cylinder contains less refrigerant than the entered value. When this occurs, the charging Cylinder should be filled using the Fill Cylinder procedure on Page 5. Press the ENTER key to return to the Main Menu.

6. Based on the vehicle manufacturer's instructions, choose Charging through either the High Pressure Hose (preferred) or the Low Pressure Hose by pressing the top or bottom (respectively) of the High-Low Charge Selector Switch (12).

Note: Do not turn on the A/C System. SAE compliant refrigerant handling stations, like the AC880, supply refrigerant in the liquid phase. Adding liquid refrigerant to a running A/C System may cause immediate A/C compressor failure.

7. Press the ENTER key to start charging.

The Display will read "WEIGHT= XX.X LB" "CHARGING" as refrigerant leaves the Charging Cylinder. The weight displayed will increase from zero to the Charge Amount entered in Step 5 plus a one ounce (0.03 KG) Over Charge set at the factory to compensate for hose loss. (See Set Over Charge Amount on Page 13 to change the default value.) When the AC880 has finished, the Display will read "CHARGE COMPLETE" "EVAC HOSES" and the Attention Light will turn ON.

8. Press the ENTER key to return to the Main Menu. The A/C System can now be turned on and tested by monitoring the High and Low Pressure Gauges.
9. Close the Red and Blue Hose Valves, disconnect them from the A/C System and go to Page 6 (Recover/Recycle) to Evacuate refrigerant from the Hoses.

WEIGHT = XX.X LB
AUTOMATIC? ←

ENTER

RECYCLE HOLD
TIME XX MIN ←

▲▶ ENTER

ENTER VACUUM
TIME XX MIN ←

▲▶ ENTER

PERFORM LEAK
TEST? Y/N ←

▶ ENTER

ADD OIL? Y/N ←

▶ ENTER

ENTER CHARGE
AMOUNT = XX.X LB ←

▲▶ ENTER

*
LOW LEVEL, GO TO
FILL CYLINDER ←

ENTER

CHECK HIGH-LOW
CHARGE SWITCH ←

ENTER

CHECK HOSES
START? ←

ENTER

WEIGHT = XX.X LB
COMPRESSOR ON

AUTOMATIC

1. Set up the AC880 and turn the Main Power Switch ON.
2. Attach the Red and Blue Hoses to the A/C System per the vehicle manufacturer's instructions and open the Red and Blue Hose Valves.
3. Determine the refrigerant capacity of the A/C System to be charged.

Note: 1 oz = 0.02835 Kg 1 Lb = 0.45359 Kg

4. Using the Keypad, press the ENTER key when the Display reads "WEIGHT= XX.X LB" "AUTOMATIC? ←" (this is the default screen of the Main Menu.) The Display will read "RECYCLE HOLD" "TIME XX MIN ←".

The Recycle Hold Time is the amount of time that the AC880 waits for "out-gassing" or for the pressure in the A/C System being recovered to rise enough to automatically restart the recovery process. The minimum value is two minutes. The value entered is stored in memory and displays as the default the next time the procedure is used.

5. Press the "Up Arrow" key to change the value of the field. Press the "Right Arrow" key to change to a different field. Press the ENTER key to accept the value. The Display will read "ENTER VACUUM" "TIME XX MIN ←".
6. Press the "Up Arrow" key to change the value of the field. Press the "Right Arrow" key to change to a different field. Press the ENTER key to accept the value. The Display will read "PERFORM LEAK" "TEST? Y/N ←".
7. Press the "Right Arrow" key to move the cursor between Y and N to select whether or not the AC880 pauses at the end of Vacuuming so that a vacuum leak can be detected in the A/C System. Press the ENTER key to accept the Yes or No choice. The choice entered is stored in memory and displays as the default the next time the procedure is used. The Display will read "ADD OIL? Y/N ←".
8. Press the "Right Arrow" key to move the cursor between Y and N to select whether or not the AC880 pauses at the end of Vacuuming (or Vacuum Leak Checking) to allow the Adding of Oil to the A/C System. Press the ENTER key to accept the Yes or No choice. The choice entered is stored in memory and displays as the default the next time the procedure is used. The Display will read "ENTER CHARGE" "AMOUNT= XX.X LB ←".
9. Press the "Up Arrow" key to change the value of the field. Press the "Right Arrow" key to change to a different field. The value entered must be greater than zero. Press the ENTER key to accept the value. The Display will read "CHECK HIGH-LOW" "CHARGE SWITCH ←".

* This screen will display if the AC880 Charge Cylinder contains less refrigerant than the entered value. When this occurs, the charging Cylinder should be filled using the Fill Cylinder procedure on Page 5. Press the ENTER key to return to the Main Menu.

10. Based on the vehicle manufacturer's instructions, choose Charging through either the High Pressure Hose (preferred) or the Low Pressure Hose by pressing the top or bottom of the High-Low Charge Selector Switch (12). Press the ENTER key when finished programming. The Display will read "CHECK HOSES" "START? ←".

Note: Do Not Turn On The A/C System. SAE compliant refrigerant handling stations, like the AC880, supply refrigerant in the liquid phase. Adding liquid refrigerant to a running A/C System may cause immediate A/C compressor failure.

11. Press the ENTER key to start the Automatic sequence.

WEIGHT = XX.X LB
COMPRESSOR OFF

*

HIGH PRESSURE
SEE MANUAL

**

CYLINDER FULL
GO TO CHARGE ←

TIME LEFT = XX MIN
PUMP ON

PUMP OFF XX MIN
CONTINUE? ←

ENTER

ADD OIL NOW
CONTINUE? ←

ENTER

WEIGHT = XX.X LB
CHARGING

RECYCLED = XX.X LB
EVAC HOSES ←

ENTER

DRAIN RECOVERED
OIL NOW! ←

ENTER

AUTOMATIC (continued)

The Display will read the "WEIGHT= XX.X LB" "COMPRESSOR ON". The AC880 will recover and recycle refrigerant from the A/C System and automatically cycle OFF when a vacuum is sensed. This vacuum level can be seen on the Low Pressure Gauge. The Display will read "WEIGHT= XX.X LB" "COMPRESSOR OFF"

A small quantity of refrigerant will probably remain in the A/C System as observed by an increasing pressure on the Low Pressure Gauge. The AC880 will automatically cycle ON to continue recovering refrigerant if pressure rises to a preset level. This automatic cycling will repeat resetting the Recycle Hold Timer each time. If a Vacuum Time greater than zero minutes was entered in Step 6, the Vacuum Pump will turn ON, the Display will read "TIME LEFT=XX MIN" "PUMP ON" and the minutes remaining will count down on the Display. The Vacuum Pump will turn OFF when the Display reads zero minutes.

12. Drain any recovered oil using the Drain Recovered Oil procedure on Page 7.
 - * This screen will display if there is an internal fault. Turn the AC880 Power Switch OFF. Contact RTI Technical Support.
 - ** This screen will display when the Charging Cylinder fills to capacity, approximately 24 lbs (11 Kg). If this occurs, the weight can be lowered using the Charging procedure on Page 9 before the AC880 can be used to recover more refrigerant. Press the ENTER key to return to the Main Menu.
13. If a Vacuum Leak Check was selected by choosing Y in Step 7 the Display will read "PUMP OFF XX MIN" "CONTINUE? ←" and the Attention Light will turn ON. The elapsed time since the Vacuum Pump stopped will count up on the Display. An increasing pressure on the Low Pressure Gauge is evidence of a vacuum leak in the A/C System. Press the ENTER key to continue with the Automatic sequence or RESET to return to the Main Menu.
14. If Add Oil was selected by choosing Y in Step 8 the Display will read "ADD OIL NOW" "CONTINUE? ←", and the Attention Light will turn ON. Refer to Figure 4 and connect Oil Charge Bottle (11) to Oil Charge High Side (7) or Oil Charge Low Side (10) based on the vehicle manufacturer's instructions for charging high or low side. Open the valve on the Oil Charge Bottle (11), and leaving it open until the correct amount of oil has left the Oil Charge Bottle. Close the valve on the Oil Charge Bottle and press the ENTER key to continue.
15. If a Charge Amount greater than zero pounds was entered in Step 9 the Display will read "WEIGHT= XX.X LB" "CHARGING" as refrigerant leaves the Charging Cylinder. The weight displayed will be increasing from zero to the charge amount entered plus a one ounce (0.03 KG) "Over Charge" set at the factory to compensate for hose loss. (See Setting Over Charge Amount on Page 13 to change the default value.) When the AC880 has finished, the Display will read "RECYCLED=XX.X LB" "EVAC HOSES" and the Attention Light will turn ON.
16. Press the ENTER key. The Display will read "DRAIN RECOVERED OIL NOW!". Drain any recovered oil using the Drain Recovered Oil procedure on Page 7.
17. Press the ENTER key to return to the Main Menu. The A/C System can now be turned on and checked by monitoring the High and Low Pressure Gauges.
18. Close the Red and Blue Hose Valves, disconnect them from the A/C System and go to Page 6 (Recover/Recycle) to Evacuate refrigerant from the Hoses.

WEIGHT = XX.X LB
AUTOMATIC? ←

▲▲▲▲▲ ENTER

WEIGHT = XX.X LB
SETUP? ←

ENTER

FILTER HOURS =
XX.X HOURS

▲

TOTAL RECYCLED =
XXXX.X KG

▲

TOTAL CHARGED =
XXXX.X KG

▲

ACCESS STORED DATA

1. Set up the AC880 and turn the Main Power Switch ON.
2. Using the Keypad, press the “Up Arrow” key five times to display “WEIGHT= XX.X LB” “SETUP? ←” and then press the ENTER key. The Display will read “FILTER HOURS=” “XX.X HOURS”.

See the Filter Maintenance section of the manual, Page 14, for the procedure to change the filters. The normal Filter Change Interval is after every 25 hours.

Note: Press and hold the “Right Arrow” key and press the RESET key to remove the “CHANGE FILTERS ←” message.

3. Press the “Up Arrow” key. The Display will read “TOTAL RECYCLED=” “XXXX.X KG”.
4. Press the “Up Arrow” key. The Display will read “TOTAL CHARGED=” “XXXX.X KG”.
5. Press the “Up Arrow” key to return to the Main Menu.

WEIGHT = XX.X LB
AUTOMATIC? ←

▲▲▲▲ ENTER

WEIGHT = XX.X LB
SETUP? ←

Calibration Switch

WEIGHT = XX.X LB
CHARGING


▲

OVER CHARGE
AMOUNT = X.XX KG ←

▲▶ ENTER

SET OVER CHARGE AMOUNT

1. Remove the front panel of the AC880.
 2. Set up the AC880 as shown on Page 4 and then turn the Main Power Switch ON. Refer to the figure below to locate the Access Hole (on the metal circuit board cover) to the Calibration Switch.
 3. Remove the plastic Calibration Tool from the mounting hole of the circuit board cover.
 4. Using the Keypad, press the "Up Arrow" key five times to display "WEIGHT= XX.X LB" "SETUP? ←".
 5. **GENTLY** press the Calibration Switch with the Calibration Tool. The Display will read "WEIGHT= XX.X LB" "CHARGING".
 6. Press the "Up Arrow" key. The Display will read "OVER CHARGE" "AMOUNT= X.XX KG←".
 7. Press the "Up Arrow" key to change the value of the field. Press the "Right Arrow" key to change to a different field. The value entered will be stored until this procedure is run again and a new value is entered. Press the ENTER key to accept the value. The Display will then return to the Main Menu.
- Note: 1 oz = 0.02835 Kg 1 Lb = 0.45359 Kg**
8. Replace the front panel of the AC880.

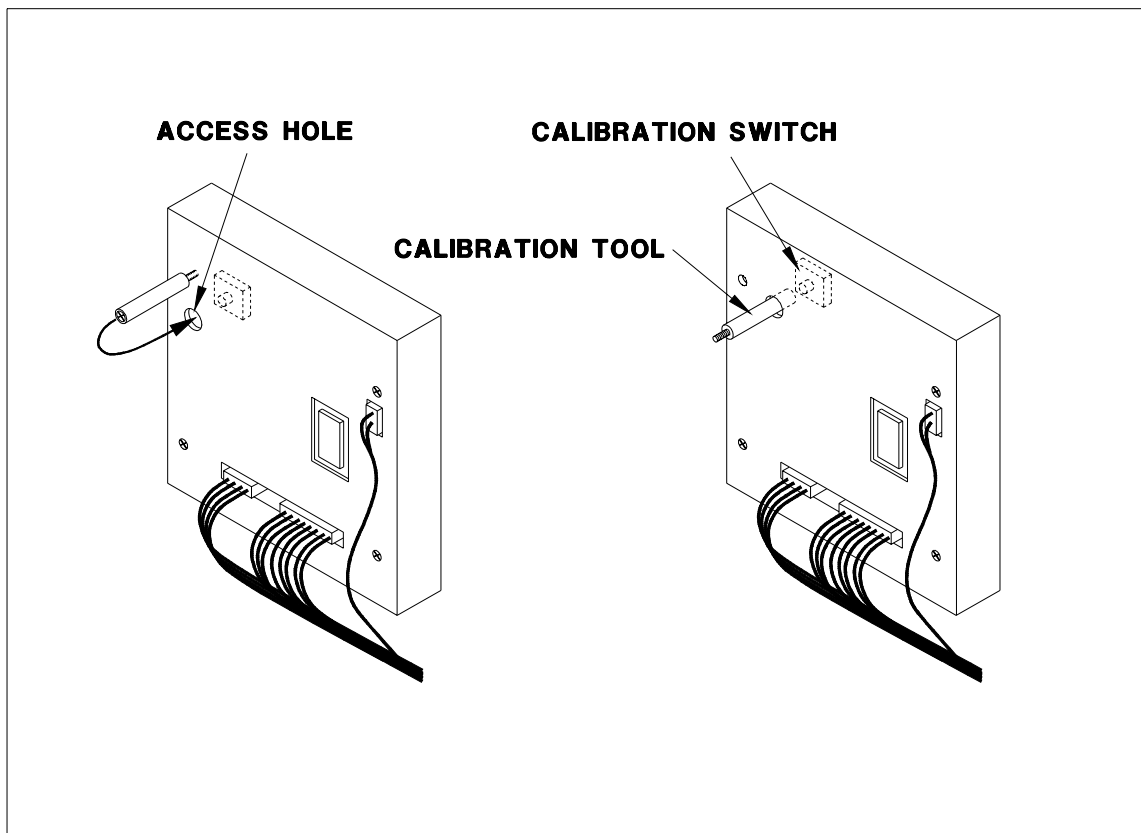

Calibration Tool Part No. 360-81214-00

SCHEDULED MAINTENANCE

DAILY...

Check the oil level in the Vacuum Pump while the pump is running. The Vacuum Pump Oil Level Sight Glass is visible through a hole in the Lower Rear Panel of the AC880. The oil level should be at the “half-way” point of the glass. If oil is not visible call Technical Support at 800-468-2321 (Ext. 259).

MONTHLY...

Check the oil level in the Compressor while the motor is not running. The Compressor Oil Level Sight Tube is on the left side of the lower section of the AC880 as viewed from the front. Remove the front panel from the AC880. The oil level should be approximately one half inch high in the Sight Tube. If oil is not visible or is above the top of the Sight Tube call Technical Support at 800-468-2321 (Ext. 259).

Clean the Condenser to maintain high efficiency performance of the AC880. Disconnect power and remove the lower rear perforated panel and blow compressed air through the cooling fins of the Condenser to remove any debris. Do not bend the fins on the Condenser coils. Air flow will be restricted causing damage to the AC880. Replace the panel before applying power to the AC880.

FILTER MAINTENANCE

The AC880 automatically keeps track of Compressor Run Time. The Display will read “CHANGE FILTERS ←” after every 25 hours every time the program returns to the Main Menu or whenever the AC880 is turned on as a reminder to change the filters. Press ENTER ← to go to the Main Menu.

The “INLET” Combo Filter (left side) must be changed after every 25 hours of operation. RTI part number 026-80077-00.

The “OUTLET” Combo Filter (right side) must be changed after every 50 hours of operation. RTI part number 026-80069-00.


The Hour Counter is reset when the “CHANGE FILTERS ←” message is cleared. Record the filter changes performed to track when only the “INLET” Combo Filter is changed versus when both are changed.

Change the filters as described below:

1. Remove front panel to service the Combo Filters.
2. Disconnect Flare Fittings from top and bottom of filters.
3. Remove mounting nuts and filters.
4. Transfer filter insulation material to new filter as applicable.
5. Install new Combo Filters using hardware removed in Step 3.
6. Connect Flare Fittings to top and bottom of filters.
7. Check for leaks and repair as necessary.
8. Replace front panel.
9. Go to Page 12, Accessing Stored Data, for instructions on how to reset the “CHANGE FILTERS ←” message.

PARTS IDENTIFICATION


Rear View

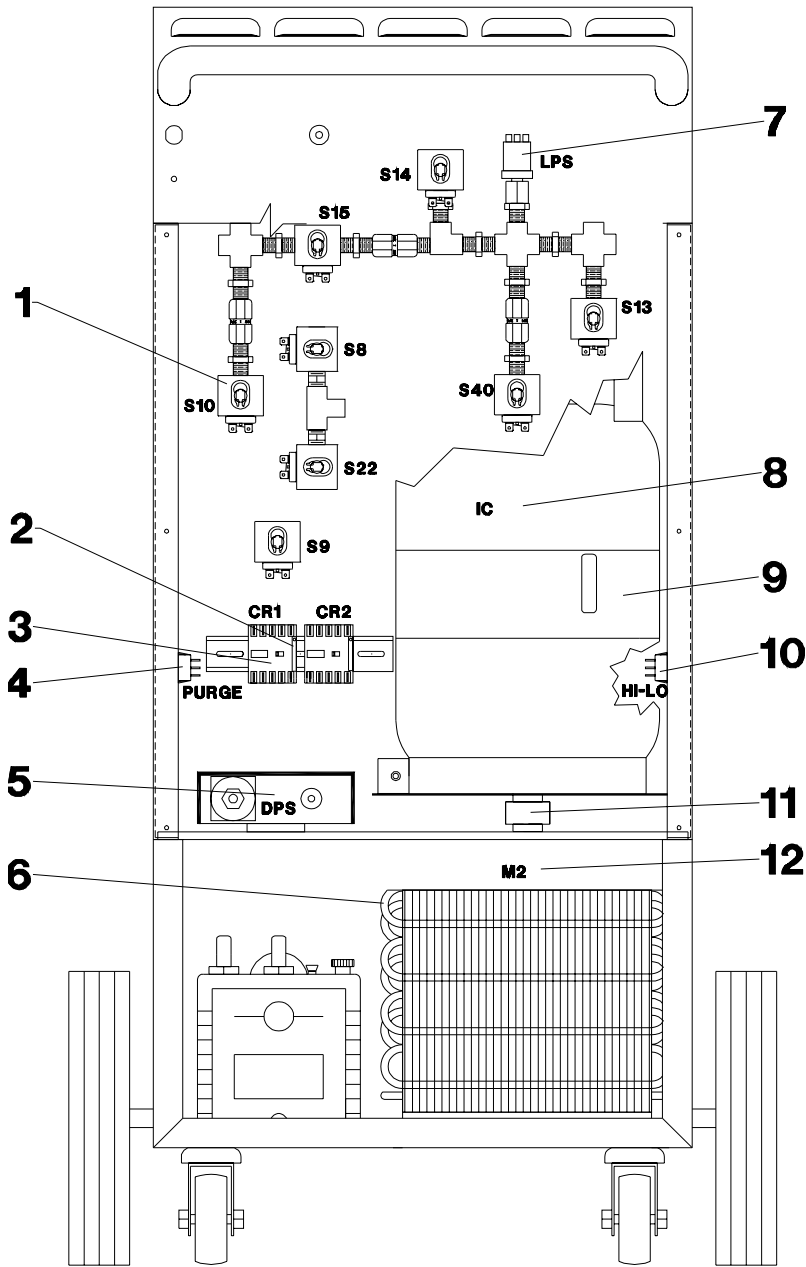

	P/N	DESCRIPTION
1	360-81292-00	Solenoid MOV Sub-Assy 120V
2	025-80314-03	Contactor Varistor 50-129 VAC/DC
3	024-80037-00	Contactor ½ HP (120V) 3NC/1NC
4	024-80035-00	Rocker Switch SPST (mom-on) Non-lighted
5	360-80369-02	D/P Switch R134A
6	360-81439-00	Condenser Assy
7	022-80050-01	Low Pressure Switch 3psig-15 In-Hg SPDT
8	360-81447-00	Cylinder Assy 30 lbs.
9	360-81426-01	Heater Belt Assy
10	024-80066-00	Rocker Switch SPDT Visired Non-lighted
11	360-81440-00	Load Cell Assy
12	360-80416-00	Fan Assy 120V

PARTS IDENTIFICATION


Front View

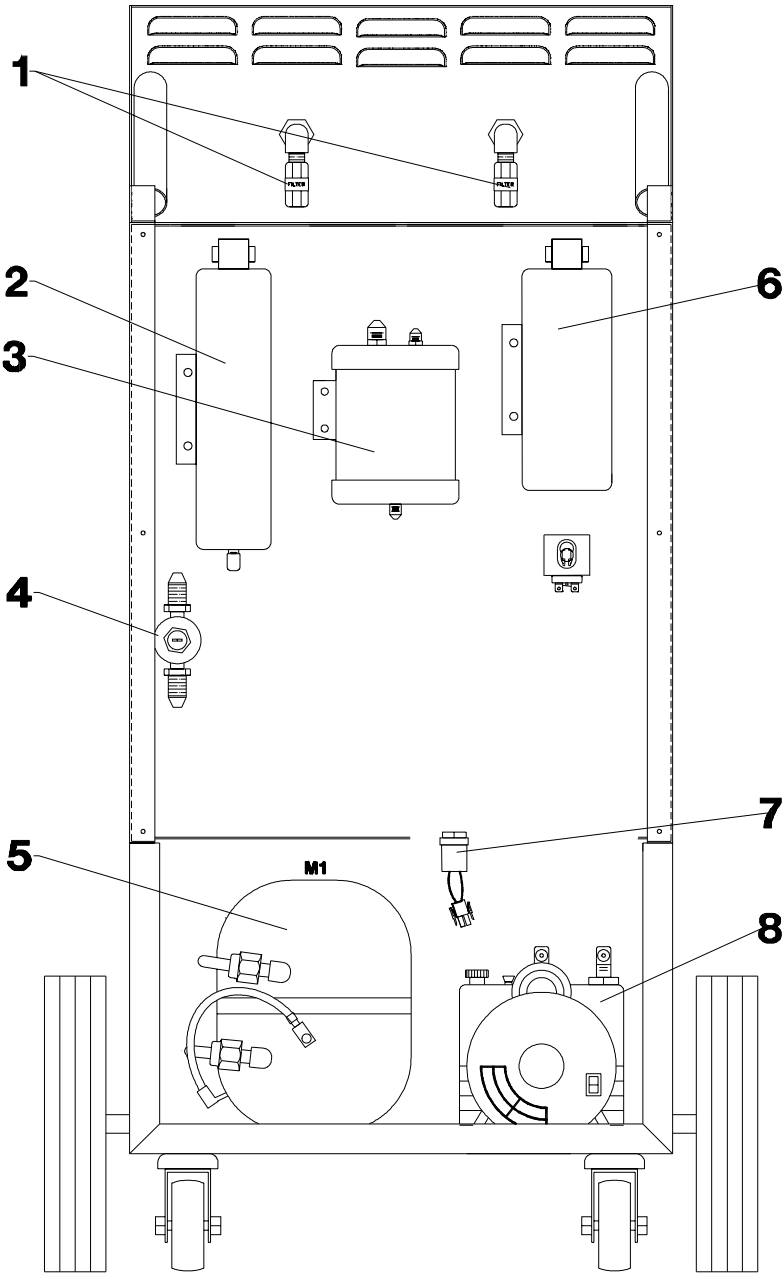

	P/N	DESCRIPTION
1	026-80240-00 026-80241-00	Filter In-Line (R12) Filter In-Line (R134a)
2	026-80077-00	Combo Filter 3/8 Flare (Long)
3	026-80070-00	Accumulator Assy
4	022-80110-00	Valve Automatic Expansion 3/8 MFL x 3/8 MFL
5	360-81356-01	Compressor Assy 780 120V
6	026-80069-00	Combo Filter 3/8 Flare (Short)
7	022-80015-02	High Pressure Switch 120V
8	026-80229-00	Pump Vac 7 CFM

PARTS IDENTIFICATION

Top Panel

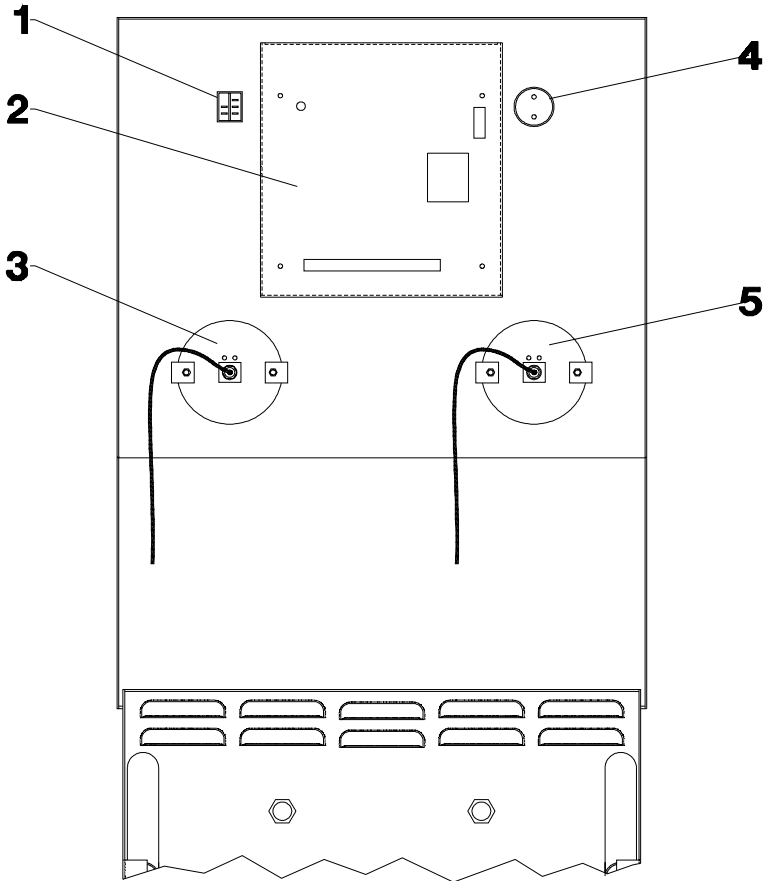

	P/N	DESCRIPTION
1	024-80040-00	Rocker Switch SPDT (on-on) Amber (125V)
2	024-80078-01	Circuit Board 120V
3	026-80065-03	Gauge 30"-120 Psig 1/4 MFL 3.5"
4	025-80046-00	Terminal RCPT
	025-80127-00	Clear Bulb Bayonet Base 120V
	025-80191-00	Lens Assembly Yellow
5	026-80071-03	Gauge 0-500 Psig 1/4 MFL 3.5"

TROUBLESHOOTING FILL CYLINDER PROCEDURE

- 1) The cylinder of new refrigerant should be at ambient temperature or greater for best performance of the Fill Cylinder procedure. Make sure the cylinder was not recently moved from an air-conditioned storage room to a warm work area. Place the cylinder on a block of wood if necessary to elevate it from a cool concrete floor. Application of a heat belt to the cylinder will greatly enhance the speed.
- 2) Verify that the cylinder of new refrigerant (14) is up-side-down as shown in the figure on page 4 and that the cylinder valve is open.
- 3) If filling the Charge Cylinder from a DOT Cylinder, make sure the hose is connected to the liquid port and the DOT Cylinder is right-side-up.
- 4) If the yellow hose (15) was connected to the Fill Port (13) **the first time the AC880 was used**, there may be excessive air in the AC880 Charge Cylinder. At least 4 lbs. of refrigerant must be recovered/recycled into the AC880 Charge Cylinder following the Recover/Recycle procedure on Page 6. During this process, the air in the AC880 Charge Cylinder will be automatically purged.
- 5) Verify that the cylinder of new refrigerant has liquid refrigerant in it by shaking the cylinder or weighing the contents. A minimum of 4 lbs. of liquid is required.

- 6) Verify that the Yellow Hose (15) is connected correctly from the Cylinder (14) to the Fill Port (13). On an R12 AC880, the Fill Port is equipped with a valve core so a depressor must be present in the hose end (see figure). The Yellow Hose (15) has a shut-off valve on one end (instead of an anti-blowback valve) which must be connected to the Fill Port (13). The depressor in the hose may be adjustable, so extend the depth of the depressor by using needle-nose pliers.

- 7) Remove the valve core from the Fill Port (13) using a valve core remover.



There may be a machine fault if the above steps do not result in a successful increase of weight shown on the display after running the Fill Cylinder procedure for a minimum of 15 minutes.

Contact RTI Technical Support at 800-468-2321 (Ext.259) for help.